MR-GU3M2P monitoring relays



Output circuit - contact data

- Multifunctions monitoring relays (AC voltage monitoring in 3-phase network) Monitoring of phase sequence and phase failure
- Detection of reverse voltage by means of asymmetry Connection of neutral wire (optional)
- Supply voltage = monitoring voltage Output: 2 CO (2 changeover contacts) Industrial cover, width 22,5 mm
- Direct mounting on 35 mm rail mount acc. to EN 60715
- Recognitions, certifications, directives: RoHS, CE

Number and type of contacts		2 CO
Rated voltage		250 V AC
Max. breaking capacity AC1		750 VA (3 A / 250 V AC) • 1 250 VA (5 A / 250 V AC) •
Max. operating fre	· ·	
 at resistive load 100 VA 		3 600 cycles/hour
at resistive load 1 000 VA		360 cycles/hour
Input circuit		
Supply voltage		= monitoring voltage terminals (N)-L1-L2-L3
Must release voltage		AC: ≥ 0,2 U _n
Operating range of supply voltage		3(N)~ 342457 V
Rated power consumption AC		9,0 VA
Range of supply frequency AC		4863 Hz
Duty cycle		100%
Measuring	 measured value 	AC sinus, 4863 Hz
circuit	 measuring inputs 	AC: 3(N)~ 400/230 V terminals (N)-L1-L2-L3
	 overload capacity 	3(N)~ 457/264 V
	 input resistance 	3(N)~ 400/230 V: 15 kΩ
	• asymmetry	fixed: typical value 30%
Insulation acco	ording to EN 60664-1	
Rated surge voltage		4 000 V 1,2 / 50 μs
Overvoltage category		III
Insulation pollution degree		3
General data		
Electrical life • resistive AC1		> 2 x 10 ⁵ 1 000 VA
Mechanical life (cycles)		> 2 x 10 ⁷
Dimensions (L x W x H)		90 x 22,5 x 108 mm
Weight		100 g
Ambient temperature • storage		-25+70 °C
(non-condensation and/or icing) • operating		-25+55 °C
Cover protection category		IP 20 EN 60529
Relative humidity		1585%
Shock resistance		15 g 11 ms
Vibration resistance		0,35 mm DA 1055 Hz
Meassuring c	ircuit data	
Functions		SEQ - monitoring of phase sequence and phase failure
		ASYM - detection of reverse voltage by means of asymmetry
		connection of neutral wire (optional)
Range of delay timing adjustment		start-up suppression: fixed, max. 0,5 s
		tripping delay: fixed, max. 0,35 s
Recovery time		100 ms
LED indicator		green LED U ON - indication of supply voltage U
		yellow LED R ON/OFF - output relay status

• If the distance between the relays mounted side by side is less than 5 mm. • If the distance between the relays mounted side by side is greater than 5 mm.

1

MR-GU3M2P monitoring relays

Functions

SEQ - Phase sequence monitoring.




When all the phases are connected in the correct sequence and the measured asymmetry is less than the fixed value, the output relay R switches into on-position (yellow LED illuminated). When the phase sequence changes, the output relay R switches into off-position (yellow LED not illuminated).

SEQ - Phase failure monitoring.



The output relay R switches into off-position (yellow LED not illuminated), when one of the three phases fails.


ASYM - Detection of reverse voltage by means of asymmetry.

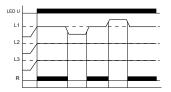


The output relay R switches into off-position (yellow LED not illuminated) when the asymmetry between the phase voltages exceeds the fixed value of the asymmetry. An asymmetry caused by the reverse voltage of a consumer (e.g. a motor which continues to run on two phases only) does not effect the disconnection.

U - supply voltage; R - output state of the relay; L1, L2, L3 - phases

Front panel description

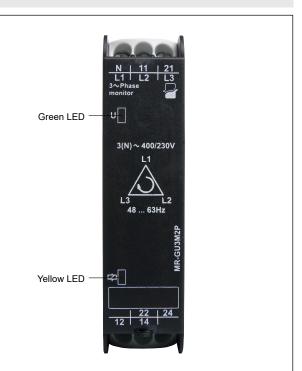


Connection diagram

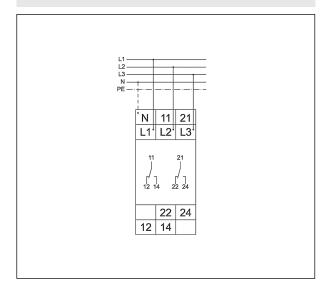


2

MR-GU3M2P monitoring relays

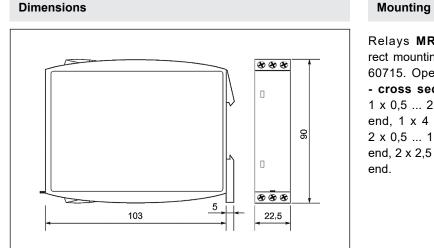

Relays MR-GU3M2P are designed for direct mounting on 35 mm rail mount acc. to EN 60715. Operational position - any. Terminals - cross section of the connection cables: 1 x 0,5 ... 2,5 mm² with/without multicore cable end, 1 x 4 mm² without multicore cable end, 2 x 0,5 ... 1,5 mm² with/without multicore cable end, 2 x 2,5 mm² flexible without multicore cable

Ordering codes

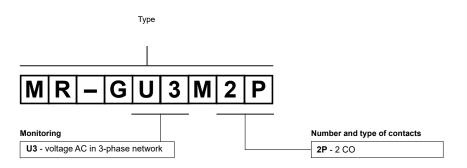

Example of ordering code:

MR-GU3M2P

monitoring relay MR-GU3M2P, multifunction (relay perform 2 functions), industrial cover, width 22,5 mm, two changeover contacts, rated input voltage (supply): AC - 3(N)~ 400/230 V

PRECAUTIONS:

1. Ensure that the parameters of the product described in its specification provide a safety margin for the appropriate operation of the device or system and never use the product in circumstances which exceed the parameters of the product. 2. Never touch any live parts of the device. 3. Ensure that the product has been connected correctly. An incorrect connection may cause malfunction, excessive heating or risk of fire. 4. In case of any risk of any serious material loss or death or injuries of humans or animals, the devices or systems shall be designed so to equip them with double safety system to guarantee their reliable operation.

3

